




ULTRASONIC UTILITY CLEANER

MODEL VGT 1910
MODEL VGT 1730
MODEL VGT 1620

Cleaning Procedure For Restraints

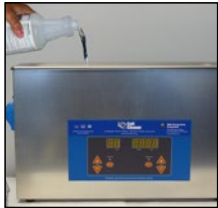

1. Prepare Cuff Cleaner Solution

Pour required fluid Ounce of Cleaning/Disinfecting Solution into Cuff Clinic tank and fill to operating line with tap water (1 inch from top).

Cuff Clinic Model 1620 – 1 oz • Cuff Clinic Model 1730 – 1.5 oz • Cuff Clinic Model 1910 – 5 oz



2. Place restraints into Cuff Clinic basket and submerge basket and restraints into Cuff Clinic tank. Cover tank with lid.




3. Set timer to ten (10) minutes, minimum.



4. Set temperature within 40°C to 60°C for best results. Press ON/OFF button to start cleaning. Press "Heating" button "OFF" to stop the heating function. Press "Ultrasonic" button "OFF" to stop the ultrasonic function.



5. After a full ten (10) minutes, remove restraints, rinse with tap water. Dry restraints completely.

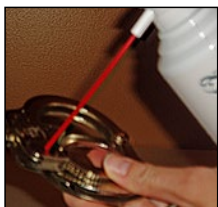

6. Using Cuff Cleaner Compressed Air, remove moisture from internal locking mechanisms and hinges.



7. Lubricate locking mechanisms and hinges with Cuff Cleaner Lubricant.

BEFORE USING PRODUCT:

- Read & follow Cuff Clinic operators manual
- Refer to Material Safety Data Sheet
- Prepare Cuff Cleaner Plus solution daily
- Please use latex gloves